

Radio / CD

# Calgary CD30 Santa Monica CD30

## Operating instructions



 **BLAUPUNKT**

---

Open here  
Ouvrir s.v.p.  
Por favor, abrir  
Favor abrir



# CONTROLS

---

- ① **[🔒]** button to unlock release panel
- ② **FM** button, selects the FM memory bank
- ③ Volume control knob
- ④ **ON** button, switches the unit on/off  
Mute
- ⑤ **TS** button, starts the Travelstore function
- ⑥ **AM** button, selects the AM waveband
- ⑦ CD slot
- ⑧ CD eject  
**CD•C** button, switches sound source between radio, CD and CD changer (if connected)
- ⑨ **AUDIO** button, adjusts bass and treble  
**LD** button, switches the loudness function on/off
- ⑩ Cursor block
- ⑪ **GEO** button, adjusts balance and fader
- ⑫ **MENU** button, accesses the menus for making basic settings
- ⑬ **1 to 5** station buttons
- ⑭ **🕒** button, indicates the time in the display

<b>Important information</b> .....	<b>6</b>	<b>CD changer operation</b> .....	<b>14</b>
Traffic safety .....	6	Starting CD changer operation.....	14
Installation .....	6	Selecting CDs .....	14
Accessories .....	6	Selecting tracks .....	14
Guarantee .....	6	Switching the display mode.....	14
International telephone information .....	6	Repeating individual tracks or entire CDs (REPEAT) .....	14
<b>Theft protection system</b> .....	<b>7</b>	Playing tracks in random order (MIX) .....	14
Removable front panel.....	7	Scanning all of the tracks on all of the CDs (SCAN) .....	15
<b>Switching the car audio system on/off</b> .....	<b>8</b>	Adjusting the scan time .....	15
<b>Volume control</b> .....	<b>8</b>	Interrupting playback (PAUSE) .....	15
Adjusting the power-on volume .....	8	<b>Clock</b> .....	<b>16</b>
Mute .....	9	Time display .....	16
Telephone mute .....	9	Setting the time .....	16
How to the confirmation tone switch on/off .....	9	Selecting the 12/24-hour time display mode.....	16
<b>Radio operation</b> .....	<b>10</b>	Activating the clock display for the car audio system when it is switched off .....	16
Switching to the radio mode.....	10	<b>Adjusting the tone</b> .....	<b>17</b>
Selecting wavebands/memory banks .....	10	Adjusting the bass .....	17
Tuning into radio stations .....	10	Adjusting the treble .....	17
Adjusting seek tuning sensitivity... ..	10	Switching Loudness on/off .....	17
Storing radio stations.....	10	<b>Adjusting the volume distribution</b> .....	<b>17</b>
Storing radio stations automatically (Travelstore).....	11	Adjusting the balance .....	17
Recalling stored radio stations .....	11	Adjusting the fader .....	17
Tuner switchover .....	11	<b>External audio sources</b> .....	<b>18</b>
<b>CD mode</b> .....	<b>12</b>	Switching the AUX output on/off ..	18
Switching to CD mode .....	12	<b>Specifications</b> .....	<b>18</b>
Selecting a track .....	12	Amplifier .....	18
Random play (MIX) .....	12	Tuner .....	18
Scanning tracks (SCAN).....	12	CD .....	18
Setting the scantime.....	12	<b>Installation instructions</b> .....	<b>65</b>
Repeating a track (REPEAT) .....	13		
Pausing playback (PAUSE) .....	13		
Changing the display .....	13		
Ejecting a CD .....	13		

# IMPORTANT INFORMATION

---

## Important information

Before you use your car audio system for the first time, please take the time to read the instruction manual carefully and make yourself familiar with the audio equipment. Keep this manual handy in your car for future reference.

### Traffic safety

 Traffic safety is always the top priority. Do not operate your car audio system unless the traffic conditions permit. Familiarize yourself with the equipment before you start driving.

Always make sure that you are still able to hear any warning signals coming from outside the vehicle, such as police or fire engine sirens, at all times. Consequently, you should always select a moderate volume for playing your car audio system while you are driving.

### Installation

If you would like to install your new car stereo yourself or add other audio components to the existing ones, then please read the instructions on installation and connection at the end of this manual carefully.

### Accessories

Use only Blaupunkt-approved accessories.

### Remote control unit

The optionally available RC 08 infrared remote control unit allows you to conveniently operate the most important system functions from the steering wheel.

### Amplifiers

All Blaupunkt amplifiers can be used.

### CD changers

The following CD changers can be connected directly: CDC A 06, CDC A 08, CDC A 072 and IDC A 09.

The CDC A 05 and CDC A 071 can be connected with an adapter cable (Blaupunkt no. 7 607 889 093).

### Guarantee

The scope of the guarantee is determined by the laws in the country where the unit is purchased.

Regardless of the legal guarantee regulations, Blaupunkt affords a 12-month guarantee.

If you have any questions about the guarantee, please contact your authorized Blaupunkt dealer. Your cash register receipt is a valid guarantee coupon.

### International telephone information

Have you got any questions on the operation of this equipment or do you require more information?

Give us a call!

You will find the international telephone and fax numbers on the last page of this manual.

## Theft protection system

### Removable front panel

To prevent your car audio system from being stolen, it has been equipped with a removable front panel (release panel). Without the front panel, the car audio system is useless to thieves.

Protect your car audio system against theft and take the operating panel with you each time you leave the vehicle. Never leave the release panel in the car, even when it is well hidden. The panel has been designed so that it is easy to remove.


#### Notes:

- Do not drop the release panel.
- Do not expose the release panel to direct sunlight or other heat sources.
- Protect the panel from exposure to moisture.
- Store the release panel in the case supplied.
- If the car audio system was on when you removed the panel, it will automatically switch back on using the same settings when you replace it (radio, CD or CD changer).

### Removing the operating panel

⇨ Press **[V]** ①.


The release panel will unlock.

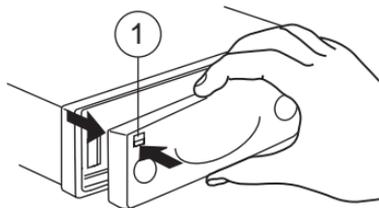

- ⇨ First pull the operating panel forward and then slide it to the left to remove it.
- When you remove the operating panel, the car audio system will automatically switch off.
- All of the settings will remain stored.
- A CD inserted into the car audio system will remain in place.

### Replacing the operating panel

- ⇨ Slide the operating panel into the guides from left to right.
- ⇨ Press the left-hand side of the panel onto the car audio system until it locks into place.

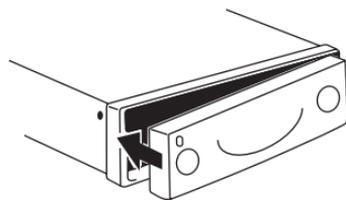

#### Note:

- While replacing the panel, be careful not to press on the display.

## Switching the car audio system on/off

The car audio system can be switched on/off in a number of ways.

- Switching the car audio system on/off with the vehicle ignition.

If the car audio system has been connected to your vehicle ignition, it is possible to switch it on and off with the ignition.

You can also switch the car audio system on when the ignition is switched off.

- ⇒ Press down and hold (4) until the car audio system switches on.

### Note:

To prevent the car battery from running down, the radio will switch off again automatically after one hour.

- Switching the car audio system on/off with the removable front panel

- ⇒ Remove the release panel.

The car audio system will switch off.

- ⇒ Replace the release panel.

The car audio system will switch on again. The last settings used (radio, CD or CD changer) will be activated.

- Switching the car audio system on/off by pressing (4).

- ⇒ Press (4) to switch the car audio system on.

- ⇒ Press (4) for longer than 2 seconds to switch the car audio system off again.

## Volume control

The car audio system volume can be adjusted to levels from 0 (off) to 66 (maximum).

- ⇒ To increase the volume, turn the volume control knob (3) to the right.
- ⇒ To decrease the volume, turn the volume control knob (3) to the left.

## Adjusting the power-on volume

It is possible to adjust the volume at which the car audio system switches on.

- ⇒ Press **MENU** (12).
- ⇒ Press **Y** (10) repeatedly until "ON VOL" appears in the display.
- ⇒ Press **<>** (10) to adjust the volume.

To make it easier to select the desired volume, you will be able to hear any changes made while you are adjusting the volume.

If you adjust this setting to 0, the car audio system will switch on at the volume used before it was switched off.

### Warning of serious injury

When the power-on volume is set to the maximum level, it may be extremely loud when the car audio system is switched on.

When the power-on volume is set to 0 and the car audio system was played at maximum volume before it was switched off, it may be extremely loud when the car audio system is switched back on. This could result in serious injury to your ears.

- ⇒ Once you have selected the desired settings, press **MENU** (12).

## Mute

You can reduce the volume of the car audio system immediately (mute).

- ⇒ Press (4).

## Selecting the mute level

It is possible to select the mute level.

- ⇒ Press **MENU** (12).
- ⇒ Press **Y** (10) repeatedly until "MUTE LVL" appears in the display.
- ⇒ Press **<>** (10) to select the mute level.
- ⇒ Once you have made your selection, press **MENU** (12).

## Telephone mute

If your car audio system has been equipped with a mobile telephone, it will automatically switch to mute when you use the phone. This will not work unless the mobile phone is connected to the car audio system as described in the installation instructions.

The car audio system will be muted to the mute level selected.

## How to the confirmation tone switch on/off

If you hold down a key for longer than two seconds, e.g. in order to save a station on one of the station keys, a confirmation tone will sound (beep). This beep is adjustable:

- ⇒ Press the **MENU** key (12).
- ⇒ Press the **Y** key (10) repeatedly until "BEEP ON" or "BEEP OFF" appears on the display.
- ⇒ Switch the beep on or off using the **<>** keys (10).
- ⇒ Once you have completed the setting, press the **MENU** key (12) once more.

# RADIO OPERATION

## Radio operation

### Switching to the radio mode

If you are currently using the CD player or CD changer,

- ⇨ press **CD•C** (8) repeatedly until "RADIO" appears in the display.

### Selecting wavebands/memory banks

Using this car audio system, you can tune into radio stations on the FM and AM wavebands. There are three memory banks for the FM waveband and one memory bank for AM. You can store five stations in each of these memory banks.

#### Selecting FM

- ⇨ To switch between the FM wavebands FM1, FM2 and FMT, press **FM** (2).

#### Selecting AM

- ⇨ To switch between the AM waveband, press **AM** (6).

### Tuning into radio stations

You can tune into radio stations in a number of different ways.

#### Automatic seek tuning

- ⇨ Press **Y** or **Λ** (10).

The radio will tune into the next available station within reception range.

### Adjusting seek tuning sensitivity

It is also possible to adjust the sensitivity of the seek tuning function. In this way you can adjust the radio to tune into stations with strong reception signals only, or to those with weaker reception signals as well.

- ⇨ Press **MENU** (12).
- ⇨ Press **Y** (10) repeatedly until "SENS" appears in the display.
- ⇨ Press **>** (10).

The currently selected setting will appear in the display. "SENS HI" indicates the highest level of sensitivity, "SENS LO" the lowest. If you select "SENS LO", lo will light up in the display.

- ⇨ Press **<>** (10) to adjust the desired sensitivity.
- ⇨ Once you have made your selection, press **MENU** (12).

#### Manual station tuning

You can also tune into radio stations manually.

- ⇨ Press **<** or **>** (10).

### Storing radio stations

#### Storing radio stations manually

- ⇨ Select the desired FM memory bank FM1, FM2, FMT or the AM waveband.
- ⇨ Tune into the radio station you would like to store.

- ⇨ Press and hold down one of the station preset buttons **1** to **5** (13) on which you want to store the radio station for longer than one second.

## Storing radio stations automatically (Travelstore)

You can automatically store the five radio stations with the strongest reception in the area. These stations will be stored in the FMT or AM memory bank, depending on which waveband you have selected.

### **Note:**

Any stations stored previously in the memory bank will be deleted.

- ⇨ Press **TS** (5) briefly.

The storing process will begin. "T-STORE" will appear in the display. After the stations have been stored, the radio will automatically begin to play the station stored on preset button 1 for the corresponding memory bank.

## Recalling stored radio stations

- ⇨ Select the desired station memory bank or the waveband.
- ⇨ Press the station button **1** to **5** (13) on which you have stored the desired radio station.

## Tuner switchover

The car audio system has been equipped with a multi-band tuner. The tuner can be adjusted to accommodate different requirements in different countries. The following regions can be selected: America, Europe, Asia and Thailand. The tuner will not be completely functional until it has been adjusted to the country in which it is being used.

## Switching over the tuner

- ⇨ Press **MENU** (12).
- ⇨ Press **Y** (10) repeatedly until "FM TUNER" appears in the display.
- ⇨ Press **<>** (10) to select the country.
- ⇨ Once you have made your selection, press **MENU** (12).

# CD MODE

## CD mode

You can use this unit to play standard CDs with a diameter of 12 cm.

 Risk of damage to CD drive!  
So-called "CD singles" with a diameter of 8 cm and contoured CDs ("shape CDs") are not suitable for playback in this unit.  
We accept no liability for any damage to the CD drive that may occur as a result of the use of unsuitable CDs.

## Switching to CD mode

- If no CD is inserted in the drive.
- ⇒ Gently insert the CD with the printed side uppermost into the CD compartment until you feel some resistance.

The CD will be drawn automatically into the drive.

Do not use force when inserting the CD. You must not hinder or assist the drive as it draws the CD in. Once inserted, CD playback begins immediately.

- If a CD is already inserted in the drive.
- ⇒ Press the **CD•C** button (8) until "CD" appears in the display.

Playback begins from the point at which it was last interrupted.

## Selecting a track

- ⇒ Press the **>** or **<** button (10) to select the next or previous track.

If the **<** button (10) is pressed once, the current track will be heard again from the beginning.

## Random play (MIX)

- ⇒ Press button **4 (MIX)** (13).  
"MIX CD" will appear briefly in the display, MIX will light up in the display. The next randomly selected track will then be played.

## Stopping MIX

- ⇒ Press button **4 (MIX)** (13) again.  
"MIX OFF" appears briefly in the display and MIX no longer lights up.

## Scanning tracks (SCAN)

You can briefly play all the tracks on a CD.

- ⇒ Press button **5 (SCAN)** (13).

## Note:

You can set the scanning time.

## Stopping SCAN and continuing playback

- ⇒ To stop scanning, press button **5 (SCAN)** (13) again.

The current track will then continue to be played.

## Setting the scantime

- ⇒ Press the **MENU** button (12).  
"MENU" appears in the display.
- ⇒ Keep pressing the **√** button (10) until "SCANTIME" appears in the display.
- ⇒ Set the required scantime using the **<** and **>** buttons (10).
- ⇒ When you have finished making your changes, press the **MENU** button (12).

### Repeating a track (REPEAT)

- ⇨ If you want to repeat a track, press button **3 (RPT)** (13).

RPT appears in the display. The track is repeated until you deactivate RPT.

### Stopping REPEAT

- ⇨ If you want to stop the repeat function, press button **3 (RPT)** (13) again.

RPT disappears. Normal playback is then continued.

### Pausing playback (PAUSE)

- ⇨ Press button **2 (||)** (13).

“PAUSE” appears in the display.

### Cancelling pause

- ⇨ Press button **2 (||)** (13) while in pause mode.

Playback is continued.

### Changing the display

To change the display between track number and playing time:

- ⇨ Press the **MENU** button (12).

“MENU” appears in the display.

- ⇨ Keep pressing the **V** button (10) until “CD DISP” appears in the display.

- ⇨ Press the **>** button (10).

The current setting is displayed.

“TIME” stands for the playing time and “PLAY” for the track number display.

- ⇨ Selected the required setting using the **<** or **>** button (10).

- ⇨ Press the **MENU** button (12).

### Ejecting a CD

To remove a CD from the unit:

- ⇨ Press the **CD•C** button (8) until the CD is ejected.

You must not hinder or assist the drive while it is ejecting the CD.

# CD CHANGER OPERATION

## CD changer operation

### Note:

Refer to the instructions included with the CD changer for more information on how to handle CDs, how to insert CDs into the changer and how to operate the changer.

### Starting CD changer operation

- ⇨ Press **CD•C** (8) repeatedly until "CHANGER" appears in the display.

Playback will begin with the first CD the changer detects in the magazine.

### Selecting CDs

- ⇨ To select a different CD up or down, press **▲** or **▼** (10) once or the required number of times.

### Selecting tracks

- ⇨ To select a different track up or down on the CD currently playing, press **▶** or **◀** (10) once or the required number of times.

### Switching the display mode

To switch the display between the CD number and the elapsed playing time,

- ⇨ press **MENU** (12).

"MENU" will appear in the display.

- ⇨ Press **▼** (10) repeatedly until "CDC DISP" appears in the display.

- ⇨ Press **▶** (10).

The current setting will be shown in the display. "TIME" stands for elapsed playing time and "CD NO" for the display of the CD number.

- ⇨ Press **◀** or **▶** (10) to select the desired setting.

- ⇨ Press **MENU** (12).

### Repeating individual tracks or entire CDs (REPEAT)

- ⇨ To repeat the track currently playing, press **3 (RPT)** (13) briefly.

"RPT TRCK" will appear briefly in the display, RPT will light up in the display.

- ⇨ To repeat the entire CD currently playing, press **3 (RPT)** (13) again.

"RPT DISC" will appear briefly in the display, RPT will light up in the display.

### Stopping the REPEAT function

- ⇨ To stop the REPEAT function for the current track or CD, press **3 (RPT)** (13) repeatedly until "RPT OFF" appears in the display and RPT no longer lights up.

### Playing tracks in random order (MIX)

- ⇨ To play the tracks of the currently selected CD in random order, press **4 (MIX)** (13) briefly.

"MIX CD" will appear briefly in the display, MIX will light up in the display.

- ⇨ To play the tracks of all of the CDs in random order, press **4 (MIX)** (13) again.

"MIX ALL" will appear briefly in the display, MIX will light up in the display.

**Note:**

The CDC A 08/ IDC A 139 is able to play all of the CDs in the changer in random order. The other CD changers first play all of the tracks on a CD in random order and then select the next CD in the changer.

**Stopping the MIX function**

- ⇨ To stop the MIX function, press **4 (MIX)** (13) repeatedly until "MIX OFF" appears in the display and MIX no longer lights up.

**Scanning all of the tracks on all of the CDs (SCAN)**

- ⇨ To scan all of the tracks on all of the CDs in ascending order, press **5 (SCAN)** (13).

"SCAN" will appear in the display.

**Stopping the SCAN function**

- ⇨ To stop the SCAN function, press **5 (SCAN)** (13) again briefly.

The track currently scanned will continue playing.

**Note:**

It is possible to adjust the scan time.

**Adjusting the scan time**

- ⇨ Press **MENU** (12).

"MENU" will appear in the display.

- ⇨ Press **Y** (10) repeatedly until "SCANTIME" appears in the display.

- ⇨ Press **<>** (10) to set the scan time as desired.

- ⇨ Once you have made your selection, press **MENU** (12).

**Interrupting playback (PAUSE)**

- ⇨ Press **2 (II)** (13).

"PAUSE" will appear in the display.

**Stopping PAUSE**

- ⇨ Press **2 (II)** (13) during the pause.

Playback will resume.

# CLOCK

---

## CLOCK

### Time display

- ⇒ To display the time briefly, press  (14).

### Setting the time

- ⇒ To set the time, press **MENU** (12).
- ⇒ Press **▼** (10) repeatedly until "CLOCKSET" appears in the display.
- ⇒ Press **▶** (10).

The time will appear in the display. The minutes will flash and can be altered.

- ⇒ Press **▲ ▼** (10) to alter the minutes.
- ⇒ Once you have altered the minutes, press **◀** (10). The hours will begin to flash.
- ⇒ Press **▲ ▼** (10) to alter the hours.
- ⇒ Once you have set the time, press **MENU** (12).

### Selecting the 12/24-hour time display mode

- ⇒ Press **MENU** (12).
- "MENU" will appear in the display.
- ⇒ Press **▼** (10) repeatedly until "24 H MODE" or "12 H MODE" appears in the display.
  - ⇒ Press **◀** or **▶** (10) to switch the display mode.
  - ⇒ Once you have selected the mode, press **MENU** (12).

### Activating the clock display for the car audio system when it is switched off

- ⇒ To activate the clock display for the car audio system when it is switched off, press **MENU** (12). "MENU" will appear in the display.
- ⇒ Press **▼** (10) repeatedly until "CLOCK OFF" or "CLOCK ON" appears in the display.
- ⇒ Press **◀** or **▶** (10) to switch the clock display on or off.
- ⇒ Once you have made the setting, press **MENU** (12).

## Adjusting the tone

### Adjusting the bass

- ⇨ To adjust the bass, press **AUDIO** (9).
- “BASS” will appear in the display.
- ⇨ Press **▲** or **▼** (10) to alter the bass.

### Adjusting the treble

- ⇨ To adjust the treble, press **AUDIO** (9).
- “BASS” will appear in the display.
- ⇨ Press **AUDIO** (9) again.
- “TREBLE” will appear in the display.
- ⇨ Press **▲** or **▼** (10) to alter the treble.

### Switching Loudness on/off

Loudness boosts the bass and treble when the volume is low to create a more natural sound.

- ⇨ Press **AUDIO** (9) for approx. two seconds.
- LD will light up in the display when Loudness is active.

### Adjusting Loudness intensity

The Loudness boost can be set in stages from one to six.

- ⇨ Press **MENU** (12).
- ⇨ Press **▼** (10) repeatedly until “LOUDNESS” appears in the display.
- ⇨ Press **◀** or **▶** (10) to alter the Loudness setting.
- ⇨ Once you have completed adjusting the settings, press **MENU** (12).

## Adjusting the volume distribution

### Adjusting the balance

- ⇨ To adjust the balance, press **GEO** (11).
- “BAL” will appear in the display.
- ⇨ Press **▲** or **▼** (10) to alter the balance between the left and right speakers.

### Adjusting the fader

- ⇨ To adjust the fader, press **GEO** (11).
- “BAL” will appear in the display.
- ⇨ Press **GEO** (11) again.
- “FADER” will appear in the display.
- ⇨ Press **▲** or **▼** (10) to alter the fader for the front and rear speakers.

## External audio sources

In place of the CD changer it is also possible to connect other external audio sources to the line output. These sources can include a portable CD player, MiniDisc player or MP3 player.

If you would like to connect another external audio source, you will require a Blaupunkt adapter cable with the Blaupunkt no.: 7 607 897 093.

You must activate the AUX output in the menu.

## Switching the AUX output on/off

⇒ Press **MENU** (12).

“MENU” will appear in the display.

⇒ Press **▼** (10) repeatedly until “AUX OFF” or “AUX ON” appears in the display.

⇒ Press **◀** or **▶** (10) to switch AUX on or off.

⇒ Once you have completed your selections, press **MENU** (12).

### Note:

You can then press **CD•C** (8) to select the AUX output.

## Specifications

### Amplifier

Output power: 4 x 25 watts sinus acc. to DIN 45 324 at 14.4 V  
4 x 40 watts max. power

### Tuner

Wavebands:

FM : 87.5 – 107.9 MHz

AM : 530 – 1710 kHz

FM frequency response:

20 - 16 000 Hz

### CD

Transmission range:

20 - 20 000 Hz

Subject to technical modification!

## **Service numbers / Numéros du service après-vente / Números de servicio / Número de serviço**

	<b>Tel.:</b>	<b>Fax:</b>
Deutschland	0 18 05 00 02 25	0 51 21 49 40 02
Belgique / België	0 25 25 54 44	0 25 25 54 48
France	014 010 70 07	014 010 73 20
Nederland	023 565 63 48	023 565 63 31
Great Britain	018 958 383 66	018 958 383 94
Danmark	44 89 83 60	44 89 86 44
Sverige	08 750 15 00	08 750 18 10
Norge	66 81 70 00	66 81 71 57
Suomi	094 359 91	094 359 92 36
Österreich	01-6 10 39-0	01-6 10 39-391
Ελλάς	015 762 241	015 769 473
Česká republika	026 130 04 41	026 130 05 14
USA	800-266 25 28	708-681 71 88
Singapore	006 535 054 47	006 535 053 12
Slovensko	042 175 873 212	042 175 873 229

**Blaupunkt-Werke GmbH**  
**Bosch Gruppe**

